

AssetTrac on ABS™ Installation Guide



Kit Includes:


AssetTrac™
on ABS Device



Four (4) Cable Ties



The AssetTrac™ on ABS device is installed inline between the main harness and the ABS ECU.

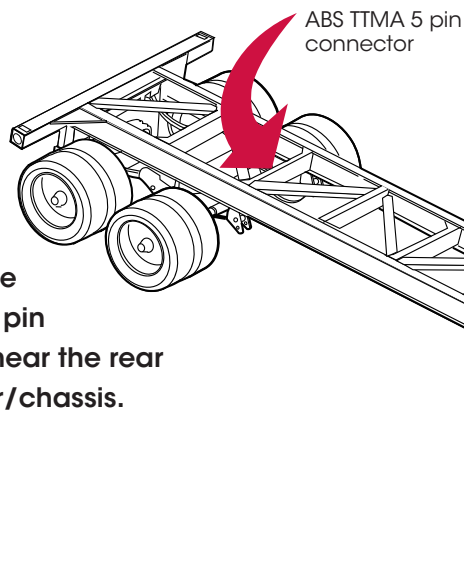


1. Locate the
ABS TTMA 5 pin
connector near the rear
of the trailer/chassis.


Professional Installation Recommended - Installation of StealthNet is recommended to be installed by a professional installer that has sufficient technical knowledge and expertise for mobile device installation and integration with commercial assets. i.e. Certified Geotab Installer certification or equivalent.

AssetTrac on ABS™ Installation Guide

2. Remove any existing cable ties. Unplug the ABS TTMA 5 pin connector to disconnect the main harness from the ABS harness.

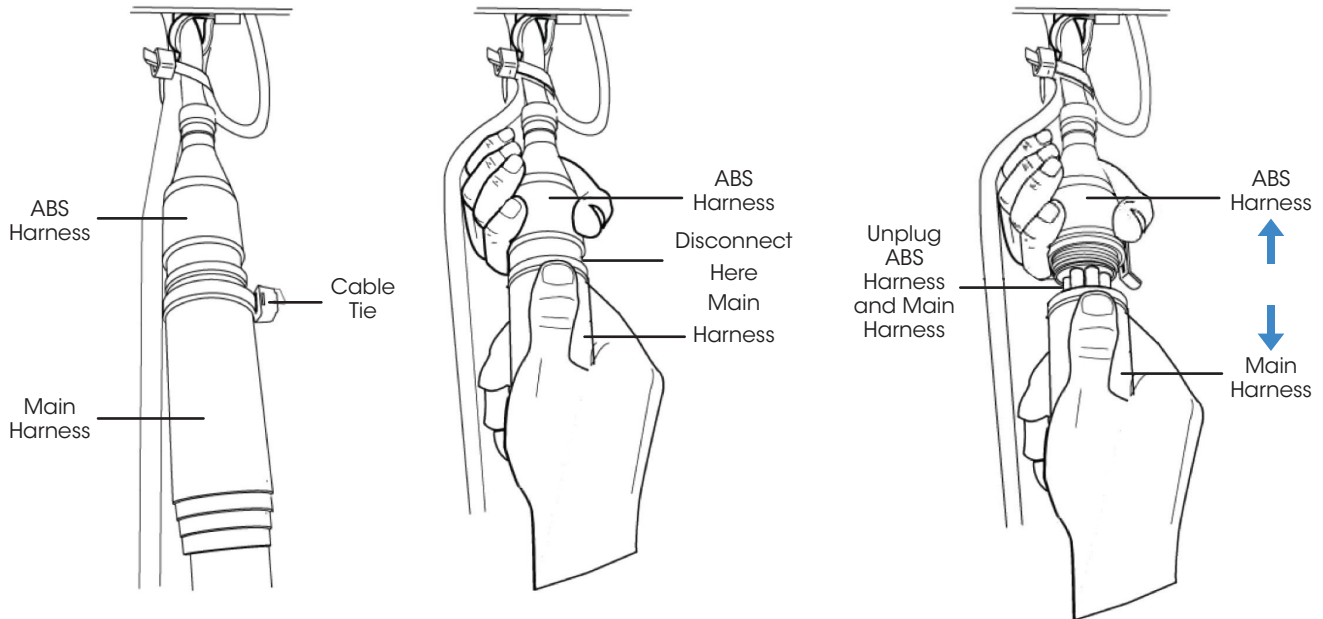


3. Install the AssetTrac™ on ABS device inline between the disconnected male and female connectors.

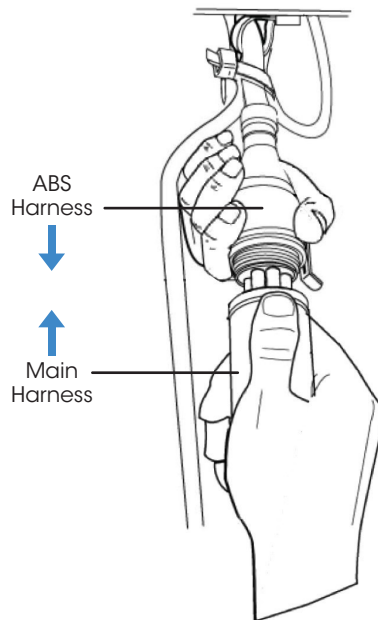

AssetTrac on ABS™ Installation Guide

4. Make sure to align and secure the locking clip between the ABS Harness and AssetTrac™ device connection.

Place one (1) cable tie over the locking clip to prevent the connection from pulling apart.

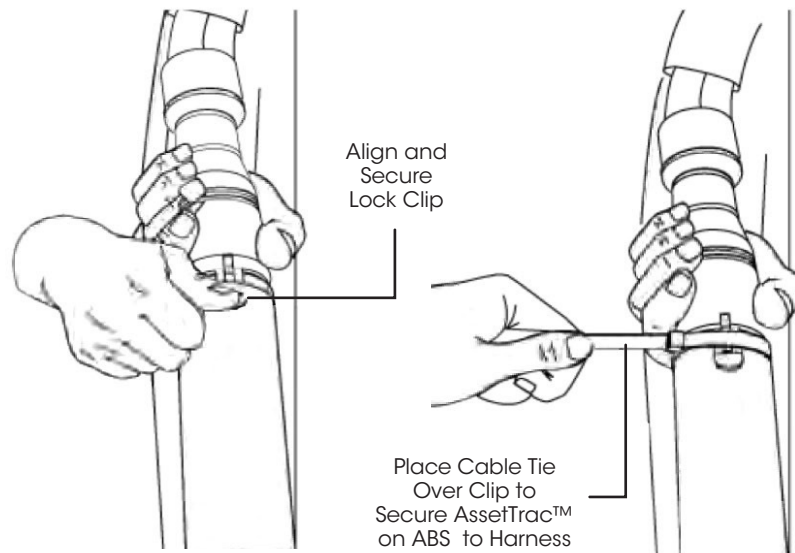

Notice: Once installed, do not pressure wash the device or the immediate surrounding area.

5. Power up the asset.